See "8.6 Command Reference" in ST5520/ST5520-01 instruction manual for details

с	lassification	Function	3154	ST5520, ST5520-01	Compatibility C: Compatible P: Partly compatible - : Newly added X: Not compatible	Note
		Clears event resister	*CLS	*CLS	С	
		Queries event status resister	*ESR?	*ESR?	С	
		Queries equipment ID	*IDN?	*IDN?	Ρ	Response varies. 3154: HIOKI, 1354,0,V1.00 ST5520: HIOKI,ST5520,00000000,V1.00 ST5520-01: HIOKI,ST5520-01,000000000,V1.00 Product serial number is given in the string of "000000000"
		Resets equipment	*RST	*RST	С	See "5.10 Default Setting List" for the initialized items.
		Starts a test	:STARt	:STARt	С	
		Ends a test	:STOP	:STOP	С	
		Queries testing status	:STATe?	:STATe?	С	
		Queries measured value	:MEASure?	:MEASure?	Р	